


 
 

 





 

 








 


 
 
 
 


 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	+100		Pre Ch
	Display		Info
	Sleep		Sleep
	A.P.S.		Media
	Clock/Timer		AV

**Originalfernbedienung    Ersatzfernbedienung**

	Menu/Bluetooth Setting		Menu
	Gt.AMP Mode		D. Menu
	Cancel		Exit
	Up		Up
	Down		Down
	>>/>>I		>>
	I<</<<		<<
	SET		Ok
	Tuner		TV/R
	Audio In		3D
	Play/Pause		Red
	Play/Pause CD		Play
	Play/Pause iPod		Green
	Play/Pause Bluetooth		Pause
	Play/Pause Metronome		Yellow
	Stop		Stop
	FM Mode		Format





Originalfernbedienung    Ersatzfernbedienung

	Play Mode	+	Shift + Play
	Repeat		Text
	Sound Mode		Dual
	Rec/Delete		Rec
	Rec Speed		Blue
	Rec Mode	+	Shift + Rec
	Treble+		Ch +
	Treble-		Ch -
	Bass+		Right
	Bass-		Left
	Super Woofer Volume+	+	Shift + Vol +
	Super Woofer Volume-	+	Shift + Vol -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

Originalfernbedienung    Ersatzfernbedienung