



 
 

 


 
 





 
 
 




 
 






 














 



 
 
 
 







 
 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / DTV		Smart
	Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Back		Back
	Zoom		Eject
	O↔O		Shift + Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	AV		AV
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	( i )		Info
	[ ≡ ]		Text





Originalfernbedienung   Ersatzfernbedienung

	[≡i]	 + 	Shift + Info
	[↕]		3D
	[?]		Media
	[□]		Stop
	TV / Radio		TV/R
	I / II		Dual
	[⊖]	 + 	Shift + Subt
	[...]		Subt

Originalfernbedienung   Ersatzfernbedienung