





Originalfernbedienung	Ersatzfernbedienung
Clock	Info / Angle
Timer	Shift + Sleep / Timer
Timer On/Off	OK
Power	Power
1/Down	1
2/Up	2
3/Set	3
Sleep	Sleep / Timer
4	4
5	5
6	6
Program	TV/Radio /
7	7
8	8
9	9
Random	Blue / Prime Video / Random
10	0

Originalfernbedienung	Ersatzfernbedienung
+10	Guide / EPG / -/--
Auto Preset	Setup / OPT /
Repeat	Green / APP / Repeat
AUX	Shift + 7
Play/Pause CD	Play / Slow
<> Tape	Pause / Step / Freeze
Tuner Band/FM	Audio / Lang I/II
Reverse Mode	Back / Return
I<</REW	I<< / Preset-
Stop	Stop / Hold
>>I/FF	>>I / Preset+
Display	Display / Media
Sound	Sound / Title
ACS	Smart / List
Super Woofer Volume-	CH- / Page-
Super Woofer Volume+	CH+ / Page+
Volume-	Vol-





Originalfernbedienung Ersatzfernbedienung

	Originalfernbedienung	Ersatzfernbedienung
	 Volume+	 Vol+

Originalfernbedienung Ersatzfernbedienung

	Originalfernbedienung	Ersatzfernbedienung

