



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture		Format
	Sound		Shift + Dual
	Aspect		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Source		AV
	Exit		Exit
	[≡i]/Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	USB		Media
	CH+		Ch +
	CH-		Ch -
	EPG		Shift + Guide
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green


 




Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	[≡]		Text
	[≡+]		Smart
	[≡x]/Repeat	 + 	Shift + Text
	[≡o]/Subtitle		Subt
	[≡?]/♥		Pre Ch
	[≡◆]/List		List
	OOI/II/Audio		Dual
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	T-Shift		TV/R

