



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡o]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡+]		I<< / Preset-
	>>I/[≡..]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Smart / List
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung
















	Info		Info / Angle
	[   ]/Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	REP/Rec		Rec / Rec Mode
	CH-		CH- / Page-
	1		1


















Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</Hold		<< / Tune-
>>/Index		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Nicam/A2		Audio / Lang I/II
Subtitle		Subtitle / EQ
Subpage		Eject / Surround
Size		Zoom / Size
Sleep		Sleep / Timer
DTV/Radio		TV/Radio /
Reveal		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

TXT/MIX		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
Enter		OK
Right		Right
Cancel		Exit / Cancel / Clear
Down		Down
Back		Back / Return
Vol+		Vol+
List		Smart / List
CH+		CH+ / Page+
Vol-		Vol-
Mode		Display / Media
CH-		CH- / Page-
1		1





















Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</[Timer]		<< / Tune-
>>/[≡?]		>> / Tune+
I<</[≡⇅]		I<< / Preset-
>>I/[≡...]		>>I / Preset+
Audio		Audio / Lang I/II
Subtitle		Subtitle / EQ
I<</[≡⇅]		Zoom / Size
<</[Timer]		Sleep / Timer
Text		Text / Goto
Source/Av		AV / Input / RDS
[II]		Menu / Home

Originalfernbedienung Ersatzfernbedienung

Up		Up
Info		Info / Angle
Left		Left
Ok		OK
Right		Right
Exit		Exit / Cancel / Clear
Down		Down
Recall		Back / Return
Vol+		Vol+
[≡i]		Smart / List
Ch+		CH+ / Page+
Vol-		Vol-
Ch-		CH- / Page-
1		1
2		2
3		3
4		4



