
 





 


 
 




 

 







 

 

 

 
 


 
 


 




 


 
 









 
 










Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		List	
Txt Stop		Stop	
Info	 +  Shift + Info	Shift + Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung



8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text		Shift + Text
Audio-		Shift + Left
Audio+		Shift + Right
Off/Tim		Pause
On/Tim		Play
Color+ P.Std		Format
Aft/Caf		Options
Game Coo		Shift + Eject

Originalfernbedienung Ersatzfernbedienung

Tune-		<<
Tune+		>>
Store		3D
Tone-		Shift + Down
Color- S.Std		Shift + Dual
Browse		Media
Tone+		Shift + Up
Bright+ Mode		Shift + Menu
Search		Shift + TV/R
Contrast+		Shift + Ch +
Contrast-		Shift + Ch -
On Pip		Shift + 1
Swap		Shift + 2
Rotate Pip		Shift + 3
Surround		Shift + Red
Nicam/Mono		Shift + Green
Level L		Shift + Yellow



Originalfernbedienung Ersatzfernbedienung

Level R/Woofers	 +  Shift + Blue

Originalfernbedienung Ersatzfernbedienung

