



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Shift + Info
	Mute		Mute
	Source		Shift + AV
	Sleep		Sleep
	Picture		Shift + Format
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	QV		Pre Ch
	SUBTL		Subt
	EPG		Guide
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Info		Info
	ATV Menu		Shift + Menu
	DTV Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH +		Ch +
	CH -		Ch -
	I/II / Exit		Exit
	I/II / Exit		Shift + Dual







Originalfernbedienung **Ersatzfernbedienung**

	Vol +		Vol +
	Vol -		Vol -
	Text		Text
	Index		Smart
	Cancel		Back
	Size		Format
	Mix		Shift + Text
	SubPg		Shift + Subt
	Reveal		Options
	Hold		Stop
	TV		Shift + TV/R
	AV		AV
	VGA		Media
	DTV		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung **Ersatzfernbedienung**

	Blue		Blue

