

 
 
 
 

 

 

 







 


 


 







 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	Tv/DVD		TV/R
	PIP		3D
	*		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	[...]/Subtitle		Subt

 




 
 


 


 
 



 


 









 


**Originalfernbedienung    Ersatzfernbedienung**

	O)/Audio		Dual
	Rec		Rec
	Camera/Angle		Options
	Play		Play
	Stop		Stop
	Pause/Step		Pause
	<< Scan		<<
	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Menu/List		Menu
	Up/PR+		Up
	Setup		D. Menu
	Down/PR-		Down
	Right		Right
	Left		Left
	OK		Ok





**Originalfernbedienung    Ersatzfernbedienung**

	Display		Info
	Return		Back
	Clear		Exit
	Zoom		Shift + Eject
	Instant Skip		Media
	Title		Shift + Guide
	Repeat		Text
	Program		Sleep
	Random		Green
	A-B		Shift + Play
	3D Surr.		Shift + 3D
	Search		Shift + TV/R
	Marker		Shift + Subt
	Thumbnail		Format
	ChP ADD		Pre Ch
	Power Tv		Shift + Power
	AV Tv		Shift + AV

**Originalfernbedienung    Ersatzfernbedienung**

	PR+ Tv		Ch +
	PR- Tv		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Mute		Mute
	Rec Mode		Shift + Rec
	Timer Rec		Blue

