

 
 
 


 
 
 
 
 
 
 



 
 

 






 
 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Power Tv	 + 	Shift + Power
	TV/DVD		TV/R
	3D Surr		Dual
	PIP		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV

Originalfernbedienung Ersatzfernbedienung

	AV Tv	 + 	Shift + AV
	PR+ Tv		Ch +
	PR- Tv		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Mute Tv		Mute
	O)))/Audio	 + 	Shift + Dual
	[...]/Subtitle		Subt
	Camera/Angle		Options
	Rec		Rec
	Rec Mode	 + 	Shift + Rec
	Timer Rec		Blue
	<< Scan		<<
	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Pause/Step		Pause



