


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Power Tv		Shift + Power
	Eject/Open-Close		Eject / Surround
	AV Tv		Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR/TRK+		Shift + CH+ /
	PR+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR/TRK-		Shift + CH- /
	PR- Tv		CH- / Page-
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	Vol+ Tv		Vol+
	Tv/VCR		TV/Radio /
	0		0
	AV		AV / Input / RDS
	Vol- Tv		Vol-
	<</Backward		<< / Tune-
	>>/Forward		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Display/CLK/CN		Display / Media
	Up		Up
	i/Setup		Info / Angle
	Left		Left
	OK/Enter		OK








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Power Tv		Shift + Power
	Eject/Open-Close		Eject / Surround
	AV Tv		Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR/TRK+		Shift + CH+ /
	PR+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR/TRK-		Shift + CH- /
	PR- Tv		CH- / Page-
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	Vol+ Tv		Vol+
	Tv7VCR		TV/Radio /
	0		0
	AV		AV / Input / RDS
	Vol- Tv		Vol-
	<</Backward		<< / Tune-
	>>/Forward		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Display/CLK/CN		Display / Media
	Up		Up
	i/Setup		Info / Angle
	Left		Left
	K/Enter		OK



