

 

 

 
 
 

 

 
 
 
 
 
 
 


 
 
 
 
 
 
 
 

 
 



 

 

 



 

 

 

 




 
 
 
 
 


 









**Originalfernbedienung    Ersatzfernbedienung**


 
 
 

 




 




 

 



	Power		Power
	Tv/Rad.		TV/R
	Subtitle		Subt
	AD		Shift + Subt
	[↔]/Ratio		3D
	Ext(Cable)		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List

**Originalfernbedienung    Ersatzfernbedienung**

	Q.View		Media
	FAV		Pre Ch
	Guide		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Home		Smart
	*		Menu
	T.Opt.		Options
	Q.Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	OK		Ok				
	Back		Back				
	Exit		Exit				
	Info		Info				
	Rec/*		Rec				
	Stop		Stop				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

