 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Guide		Guide
	[]/Ratio		Subt
	Info		Info
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		List
	TV		TV/R

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Settings/List		Menu
	Back		Back
	Exit		Exit
	Q.Menu		D. Menu
	FAV		Pre Ch
	Mute		Mute
	Simplink		Media
	Q.View		Options
	Energy/Saving		3D
	AV Mode		Format
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

