



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|-----------------------|
| | Function | | Smart / List |
| | Power | | Power |
| | Open/Close | | Eject / Surround |
| | Sleep | | Sleep / Timer |
| | Title | | Sound / Title |
| | Display | | Display / Media |
| | Menu | | Menu / Home |
| | Setup | | Setup / OPT / |
| | Up / Preset Up | | Shift + >> / Preset+ |
| | Up / Preset Up | | Up |
| | Left/Tun- | | Shift + << / |
| | Left/Tun- | | Left |
| | Enter | | OK |
| | Right/Tun+ | | Right |
| | Right/Tun+ | | Shift + >> / |
| | Down / Preset | | Shift + I<< / Preset- |
| | Down / Preset | | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|-----------------------------|
| | Return | | Back / Return |
| | Rec | | Rec / Rec Mode |
| | Stop | | Stop / Hold |
| | Play/MO/ST | | Play / Slow |
| | Pause/Step | | Pause / Step / Freeze |
| | I<< Skip | | I<< / Preset- |
| | << Scan | | << / Tune- |
| | Scan >> | | >> / Tune+ |
| | Skip >>I | | >>I / Preset+ |
| | Random/Repeat | | Green / APP / Repeat |
| | Random/Repeat | | Blue / Prime Video / Random |
| | Vol+ | | Vol+ |
| | ♪/LG EQ | | Audio / Lang I/II |
| | Mute | | Mute / Dimmer |
| | Vol- | | Vol- |
| | EQ ♪ | | Shift + Subtitle / EQ |
| | 1 | | 1 |



Down



Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------|----------------|--|--------------------------|
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD - STB 3 | 3 |
| CLEAR | Clear | CLEAR EXIT CANCEL | Exit / Cancel / Clear |
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| SUBTITLE | [...]/Subtitle | EQ SUBTITLE | Subtitle / EQ |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI - BAT 0 | 0 |
| POWER | Power Tv | SHIFT + POWER | Shift + Power |
| + PR/CH | PR/CH+ Tv | SHIFT + + CH PAGE | Shift + CH+ / |
| + VOL | Vol+ Tv | SHIFT + + VOL | Shift + Vol+ |
| PROG.MEMO | Prog/Memo | PROGRAM TV/ RADIO | TV/Radio / |
| INPUT | Input Tv | SHIFT + RDS AV INPUT | Shift + AV / Input / RDS |
| - PR/CH | PR/CH- Tv | SHIFT + - CH PAGE | Shift + CH- / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--------------------------|----------------|---------------------------------------|------------------|
| VOL - | Vol- Tv | SHIFT + VOL - | Shift + Vol- |
| RDS | RDS | RDS AV INPUT | AV / Input / RDS |
| RESOLUTION PTY | PTY/Resolution | GOTO TEXT | Text / Goto |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

