













 























 


 



 
 







 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Disp.Mode		Display / Media
	Dimmer		Shift + Mute / Dimmer
	Mute		Mute / Dimmer
	Preset/Folder Up		CH+ / Page+
	USB		Shift + 8
	Vol+		Vol+
	Preset/Folder		CH- / Page-
	Function		Menu / Home
	Vol-		Vol-
	Sleep		Sleep / Timer
	Play/Pause		Play / Slow
	Play		Up
	Pause		Pause / Step / Freeze
	Clock		Shift + Sleep / Timer
	<</Tune-		<< / Tune-
	Tun.-		Left

Originalfernbedienung Ersatzfernbedienung

	Stop/Mo/St		OK
	Stop		Stop / Hold
	>>/>>I		>> / Tune+
	Tun.+		Right
	D.Skip		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Repeat		Down
	Program/Memo		TV/Radio /
	RDS		AV / Input / RDS
	PTY		Picture / Format
	PTY Search		Red / Netflix / Search
	EQ Master		Subtitle / EQ
	XDSS plus		Audio / Lang I/II
	XTS Pro		Sound / Title
	Random		Blue / Prime Video / Random
	1		1
	2		2



