










 

 

 

 

 



 

 

 

 
 
 

 
 















 



 

 

 
 
 
 
 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	Input		AV
	Q.Menu		Menu
	[]/Ratio		Format
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide







 

 
 
 
 








 
 
 

 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	Q.View		D. Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	FAV		Pre Ch
	Info		Info
	Page+		Ch +
	Page-		Ch -
	APP/*		Media
	Home		Smart
	My APPS		Shift + Media
	Text		Text
	T.Opt		Options
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	AD	 + 	Shift + Subt
	List		List
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

