












 

 


























 
 

 
 


 










 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | List |  | Smart / List |
|  | 0/Quick Access |  | 0 |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | CH- |  | CH- / Page- |









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------------------|
|  | Home |  | Menu / Home |
|  | * |  | Setup / OPT / |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Wheel Up |  | Shift + Up |
|  | Right |  | Right |
|  | OK |  | OK |
|  | Wheel Down |  | Shift + Down |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Guide |  | Guide / EPG / -/- |
|  | Netflix |  | Shift + Red / Netflix / |
|  | Source |  | AV / Input / RDS |
|  | Prime Video |  | Shift + Blue / Prime |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Blue |  | Blue / Prime Video / Random |
|  | Movies |  | Display / Media |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

