
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	O))/Audio		Dual
	Subtitle		Subt
	Setup		Options
	Camera/Angle		TV/R
	Play		Play
	Stop		Stop
	Pause/Step		Pause
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	DVD Menu		D. Menu
	Return		Back
	Display		Info
	Title		List

Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Clear		Exit
	Program		Sleep
	Repeat		Text
	Zoom		Shift + Eject
	Resolution		3D
	A-B		Shift + Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung    Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0

Originalfernbedienung    Ersatzfernbedienung