


 




 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/VCR		TV/R
	AV		AV
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Display/CLK/CN		3D
	i/Setup		Info
	Disc Menu		D. Menu
	Return		Back
	O)/Audio		Dual
	[...]/Subtitle		Subt


 



 




Originalfernbedienung **Ersatzfernbedienung**

	Camera/Angle		Red
	Zoom		Shift + Eject
	Rec/ITR		Rec
	Lock		Pre Ch
	Title		Guide
	Program		Sleep
	Marker		Green
	Search		Shift + TV/R
	Clear		Exit
	Repeat		Text
	A-B/LP		Yellow
	Random/CM		Blue
	ShowView		Media
	Power Tv		Shift + Power
	*		Shift + 3D
	AV Tv		Shift + AV
	PR+ Tv		Shift + Ch +




Originalfernbedienung **Ersatzfernbedienung**

	PR- Tv		Shift + Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/VCR		TV/R
	AV		AV
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Display/CLK/CN		3D
	i/Setup		Info
	Disc Menu		D. Menu
	Return		Back
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	O)/Audio		Dual
	[...]/Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Camera/Angle		Red
	Zoom		Shift + Eject
	Rec/ITR		Rec
	Lock		Pre Ch
	Title		Guide
	Program		Sleep
	Marker		Green
	Search		Shift + TV/R
	Clear		Exit
	Repeat		Text
	A-B/LP		Yellow
	Random/CM		Blue
	ShowView		Media
	*		Shift + 3D
	Power Tv		Shift + Power
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Originalfernbedienung Ersatzfernbedienung

	PR+ Tv		Shift + Ch +
	PR- Tv		Shift + Ch -
	AV Tv		Shift + AV

