 
 






 





 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/RAD		TV/Radio /
	Input		AV / Input / RDS
	AV Mode		Picture / Format
	Energy Saving		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media






 
 


 

 
 
 
Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	PR-/Page Down		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green/Stop		Green / APP / Repeat
	Green/Stop		Stop / Hold
	Yellow/Play		Yellow / YouTube / Repeat
	Yellow/Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Blue/Prime Video / Random		Blue / Prime Video / Random
	Blue/Step / Freeze		Pause / Step / Freeze
	Text / Goto		Text / Goto
	T.Opt / Preset-		I<< / Preset-
	Setup / OPT /		Setup / OPT /
	<< / Tune-		<< / Tune-
	>>I / Presets+		>>I / Preset+
	Subtitle / EQ		Subtitle / EQ
	>> / Tune+		>> / Tune+
	Sleep / Timer		Sleep / Timer
	D.Menu / Top		D.Menu / Top
	Info / Angle		Info / Angle
	Guide / EPG / -/--		Guide / EPG / -/--
	Fav / Marker / PC		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

