



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		Play/Pause		Pause
	Mute		Mute				
	Home		Smart				
	Vol+		Vol +				
	Vol-		Vol -				
	Up		Up				
	Left		Left				
	OK		Ok				
	Right		Right				
	Down		Down				
	i		Info				
	:≡		Guide				
	Settings		Options				
	Settings		Menu				
	Stop		Stop				
	Rec		Rec				
	Play/Pause		Play				

