





































Originalfernbedienung    Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	Title/TTX		Sound / Title
	7		7
	8		8
	9		9
	Menu		Menu / Home
	10+		Shift + Guide / EPG / -/-
	0		0
	Goto		Text / Goto

Originalfernbedienung    Ersatzfernbedienung

	FAV		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Up/CH+		Up
	Up/CH+		Shift + Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Source		AV / Input / RDS
	Down/CH-		Shift + Down



