




 

 

 

 


 



 

 



 
 


 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | Power |  | Power |
|  | Info |  | Info |
|  | Setup |  | Options |
|  | Mute |  | Mute |
|  | Menu |  | Menu |
|  | Music |  | Media |
|  | Copy |  | 3D |
|  | Zoom |  | Eject |
|  | TV System |  | TV/R |
|  | Source |  | AV |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Return |  | Back |
|  | Home |  | Smart |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Timeshift |  | Sleep |
|  | Goto |  | Pre Ch |
|  | Rec |  | Rec |
|  | Play |  | Play |
|  | Stop |  | Stop |



