


 















 

 



















 

 

 

 

 



 



 

 

 



 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Rec		Rec
	Browser		Media
	Timer		Shift + AV
	Copy		Smart
	Guide		Guide
	Source		AV
	Teletext		Text
	EPG		Shift + Guide
	Rec List		List
	Vol +		Vol +
	Vol -		Vol -
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Pre Ch
	TV System		TV/R
	Setup		Menu





**Originalfernbedienung    Ersatzfernbedienung**

	Option		Options
	Play		Play
	Stop		Stop
	Pause / Step		Pause
	I<< Prew		I<<
	Next >>I		>>I
	<<		<<
	>>		>>
	Subtitle		Subt
	Display		Info
	Audio		Dual
	Zoom		Eject
	Time Shift		Format
	Repeat		Shift + Text
	Select		Shift + Ok
	Confirm		Yellow

**Originalfernbedienung    Ersatzfernbedienung**