

 
 

 

 


 








 
 




 
 
 
 









Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Progr.	 Sleep
Audio Off		Return	 Back
Slow Down		Menu Right	 Right
Slow Up		Menu Down	 Down
Auto/Track		Volume+	 Vol +
Title		Prev.	 I<<
Zoom		Top Menu	 D. Menu
Repeat/1/All		Next	 >>I
Subt.		Volume-	 Vol -
Display		1	 1
Rep/A-B	 +  Shift + Text	2	 2
Menu		3	 3
Stop		4	 4
Pause		Shuffle	 Red
Menu Up		5	 5
Menu Left		6	 6
OK Enter		Syst.Preset	 +  Shift + Options



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Remain		+10	 Guide
7		0	 0
Record		C/CH	 Pre Ch
Game		Clear/00:00	 +  Shift + 9
Pbc		Digest	 +  Shift + Guide
Np		3D	 3D
Mode		Audio	 +  Shift + Dual
Rewind			
F.Forward			
Timer	 +  Shift + AV		
Angle			
Video			
Lang			
Random			
Play			
8			
9			

