
 

 




 



 

 









 


 












 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EPG		Guide / EPG / -/--
	REP		TV/Radio /
	Mute		Mute / Dimmer
	Rec List		Shift + Rec / Rec Mode
	CH List		Smart / List
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	0		0
	Recall		Back / Return
	Fav		Fav / Marker / PC
	Vol +		Vol+
	Picture		Picture / Format
	Nicam / A2		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	Sound		Sound / Title
	Sleep		Sleep / Timer
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Screen		Blue / Prime Video / Random
	Setup / TV/Txt		Setup / OPT /
	D-Menu /		D.Menu / Top
			Title / Reveal
			PRO
			LAN / Hold
			Size / A-B
			Goto / Subpage
			Index / Slow
			Shift + Sound / Title
			Shift + Display / Media
			Shift + Smart / List
			Zoom / Size
			Text / Goto
			Info / Angle

Cancel                      Menu

