
 




 


 
 
 
 



 
 
 

 


 


 
 
 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Auto/Track		Smart
Subt.		Subt
Title		List
Pause		Pause
Rep/A-B		Shift + Text
Zoom		Shift + Eject
Repeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Menu Left		Left
Progr.		Sleep

Originalfernbedienung Ersatzfernbedienung

Return		Back
Display		Info
OK Enter		Ok
Menu Right		Right
Menu Down		Down
1		1
2		2
3		3
4		4
Next		>>
Pbc		Media
Game		Vol -
Top Menu		D. Menu
Prev.		<<
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Setup			
Open/Close			
Mark	 +  Shift + 7		
Play			
Rewind			
Record			
Digest			
3D			
Audio			
F.Forward			
Angle			

