


 
 

 
 



 



 

 



 









 

 

 
 
 


 

 

 
 
 

 

 













| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|--|---|---|---|
|  Open/Close |  Eject |  Recall |  Back |
|  Dimmer |  Media |  Random |  Options |
|  1 |  1 |  AMS |  Dual |
|  2 |  2 |  A-B |  TV/R |
|  3 |  3 |  Stop |  Stop |
|  4 |  4 |  Play |  Play |
|  5 |  5 |  I<< |  I<< |
|  6 |  6 |  >>I |  >>I |
|  7 |  7 |  << |  << |
|  8 |  8 |  >> |  >> |
|  9 |  9 |  Pause |  Pause |
|  0 |  0 |  Vol+ |  Vol + |
|  Cancel |  Exit |  Vol- |  Vol - |
|  Prog |  Sleep | | |
|  Edit |  Smart | | |
|  Time |  AV | | |
|  Repeat |  Text | | |

