


 







 

 

 

 
 



 

 


 
 

 







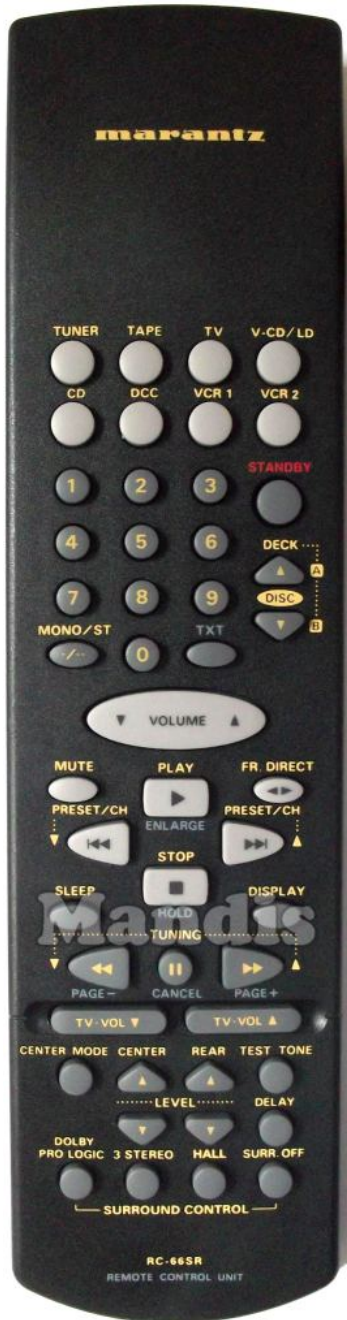 
Originalfernbedienung Ersatzfernbedienung

	Standby CD		Power
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0 CD		0
	DCC		Blue
	VCR1		Red
	VCR 2		Green
	TV		TV/R
	Tape		Smart
	Tuner		Media

Originalfernbedienung Ersatzfernbedienung

	V-CD/LD		3D
	CD		Yellow
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Display CD		Info
	Sleep		Sleep
	Dolby Pro Logic		Options
	3 Stereo		Dual
	Hall		Subt
	Center Mode		Ok
	Test Tone		AV
	Delay		Format
	Center Up		Up
	Center Down		Down
	Rear Up		Right
	Rear Down		Left





Originalfernbedienung Ersatzfernbedienung

	Pause/Cancel		Pause
	<</Tuning Down/Page- CD		<<
	>>/Tuning Up/Page+ CD		>>
	Play/Enlarge CD		Play
	Stop/Hold CD		Stop
	>>I/Preset/CH+		>>I
	I<</Preset/CH-		I<<
	Surr.Off		Back
	Disc Up/Deck A		Ch +
	Disc Down/Deck B		Ch -
	Standby Tv		Shift + Power
	Tv-Vol Up		Shift + Vol +
	Tv-Vol Down		Shift + Vol -
	1 Tv		Shift + 1
	2 Tv		Shift + 2
	3 Tv		Shift + 3
	4 Tv		Shift + 4

Originalfernbedienung Ersatzfernbedienung

	5 Tv		Shift + 5
	6 Tv		Shift + 6
	7 Tv		Shift + 7
	8 Tv		Shift + 8
	9 Tv		Shift + 9
	0 Tv		Shift + 0
	-/--/Mono/ST Tv		Guide
	TXT Tv		Text
	Mute Tv		Shift + Mute
	Display Tv		Shift + Info
	Play/Enlarge Tv		Shift + Play
	I<</Preset/CH Down TV		Shift + I<<
	>>I/Preset/CH Up		Shift + >>I
	Stop/Hold Tv		Shift + Stop
	Pause/Cancel		Shift + Pause
	<</Tuning Down/Page - Tv		Shift + <<
	>>/Tuning Up/Page+ Tv		Shift + >>

 

 






 
 
 
 
 
 

 







Originalfernbedienung Ersatzfernbedienung

 




 
 
 
 
 

 

	Standby VCR 1		Power
	VCR 1		Red
	VCR 2		Green
	CD		Yellow
	DCC		Blue
	TV		TV/R
	Tape		Smart
	Tuner		Media
	V-CD/LD		3D
	1 VCR 1		1
	2 VCR 1		2
	3 VCR 1		3
	4 VCR 1		4
	5 VCR 1		5
	6 VCR 1		6
	7 VCR 1		7
	8 VCR 1		8

Originalfernbedienung Ersatzfernbedienung

	9 VCR 1		9
	0 VCR 1		0
	-/--/Mono/ST VCR		Guide
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Sleep		Sleep
	Play/Enlarge VCR		Play
	Stop/Hold VCR		Stop
	I<</Preset/CH Down VCR 1		I<<
	>>I/Preset/CH Up VCR 1		>>I
	<</Tuning Down/Page- VCR		<<
	>>/Tuning Up/Page+ VCR 1		>>
	Pause/Cancel VCR		Pause
	Standby Tape		Shift + Power
	Disc Up/Deck A		Ch +
	Disc Down/Deck B Tape		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Play/Enlarge Tape		Shift + Play				
	Stop/Hold Tape		Shift + Stop				
	I<</Preset/CH Down Tape		Shift + I<<				
	>>I/Preset/CH Up Tape		Shift + >>I				
	Pause/Cancel		Shift + Pause				
	<</Tuning Down/ Page- Tape		Shift + <<				
	>>/Tuning Up/page+ Tape		Shift + >>				
	<>/FR.Direct		Pre Ch				

 
 















 
 
 


 






 
 





Originalfernbedienung Ersatzfernbedienung

	Standby DCC		Power
	VCR 1		Red
	VCR 2		Green
	CD		Yellow
	DCC		Blue
	TV		TV/R
	Tape		Smart
	Tuner		Media
	V-CD/LD		3D
	1 DCC		1
	2 DCC		2
	3 DCC		3
	4 DCC		4
	5 DCC		5
	6 DCC		6
	7 DCC		7
	8 DCC		8


 






 


Originalfernbedienung Ersatzfernbedienung

	9 DCC		9
	0 DCC		0
	Disc Up/Deck A		Ch +
	Disc Down/Deck B DCC		Ch -
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Sleep		Sleep
	<>/FR.Direct DCC		Pre Ch
	Display DCC		Info
	Play/Enlarge DCC		Play
	Stop/Hold DCC		Stop
	>>I/Preset/CH Up DCC		>>I
	I<</Preset/CH Down DCC		I<<
	Pause/Cancel DCC		Pause
	<</Tuning Down/Page- DCC		<<
	>>/Tuning Up/Page+ DCC		>>



 
 






Originalfernbedienung Ersatzfernbedienung

	Standby VCR 2	 + 	Shift + Power
	1 VCR 2	 + 	Shift + 1
	2 VCR 2	 + 	Shift + 2
	3 VCR 2	 + 	Shift + 3
	4 VCR 2	 + 	Shift + 4
	5 VCR 2	 + 	Shift + 5
	6 VCR 2	 + 	Shift + 6
	7 VCR 2	 + 	Shift + 7
	8 VCR 2	 + 	Shift + 8
	9 VCR 2	 + 	Shift + 9
	0 VCR 2	 + 	Shift + 0
	-/--/Mono/ST VCR		Guide
	Play/Enlarge VCR	 + 	Shift + Play
	I<</Preset/CH Down VCR 2	 + 	Shift + I<<
	>>I/Preset/CH Up VCR 2	 + 	Shift + >>I
	Stop/Hold VCR	 + 	Shift + Stop
	Pause/Cancel VCR	 + 	Shift + Pause












 



Originalfernbedienung Ersatzfernbedienung

	<</Tuning Down/Page- VCR	 + 	Shift + <<
	>>/Tuning Up/Page+ VCR 2	 + 	Shift + >>

 
 








 
 
 
 













 
 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	CD		Yellow
	DCC		Blue
	VCR1		Red
	VCR2		Green
	TV		TV/R
	Tape		Smart
	Tuner		Media
	V-CD/LD		3D
	1 V-CD/LD		1
	2 V-CD/LD		2
	3 V-CD/LD		3
	4 V-CD/LD		4
	5 V-CD/LD		5
	6 V-CD/LD		6
	7 V-CD/LD		7
	8 V-CD/LD		8

Originalfernbedienung Ersatzfernbedienung

	9 V-CD/LD		9
	0 V-CD/LD		0
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Sleep		Sleep
	Play/Enlarge V-CD/LD		Play
	Stop/Hold		Stop
	<</Tuning Down/Page-		<<
	I<</Preset/CH Down V-CD/LD		I<<
	>>I/Preset/CH Up V-CD/LD		>>I
	>>/Tuning Up/Page+		>>
	Pause/Cancel V-CD/LD		Pause
	Display V-CD/LD		Info
	Disc Up/Deck A V-CD/LD		Ch +
	Disc Down/Deck B V-CD		Ch -
	Standby Tuner		Shift + Power




Originalfernbedienung Ersatzfernbedienung

	1 Tuner	+	Shift + 1
	2 Tuner	+	Shift + 2
	3 Tuner	+	Shift + 3
	4 Tuner	+	Shift + 4
	5 Tuner	+	Shift + 5
	6 Tuner	+	Shift + 6
	7 Tuner	+	Shift + 7
	8 Tuner	+	Shift + 8
	9 Tuner	+	Shift + 9
	0 Tuner	+	Shift + 0
	-/--/Mono/ST		Guide
	l<</Preset/CH Down Tuner	+	Shift + l<<
	>> /Preset/CH Up Tuner	+	Shift + >>
	Display Tuner	+	Shift + Info
	<</Tuning Down/Page-	+	Shift + <<
	>>/Tuning Up/Page+ Tuner	+	Shift + >>
	<>/FR.Direct		Pre Ch

Originalfernbedienung Ersatzfernbedienung

