 

 


 

 

 







 


















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CBL/SAT		0
	Media Player		Guide / EPG / -/--
	Blu-ray/DVD		2
	Game		Fav / Marker / PC
	AUX		7
	Tuner		6
	Phono		5
	TV Audio		1
	CD		3
	USB		8
	Bluetooth		9
	Internet Radio		4
	Heos		Smart / List
	CH+		CH+ / Page+
	ECO		Zoom / Size
	Volume+		Vol+

**Originalfernbedienung    Ersatzfernbedienung**

	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	I<</Tune-		I<< / Preset-
	I<</Tune-		<< / Tune-
	Play/Pause		Play / Slow
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		>> / Tune+





**Originalfernbedienung Ersatzfernbedienung**

	Band		Display / Media
	Stop/Mode		Stop / Hold
	Memory		Eject / Surround
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat
	Smart Select 4		Blue / Prime Video / Random
	Speaker		Subtitle / EQ
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Sound Mode		Sound / Title

















 








**Originalfernbedienung Ersatzfernbedienung**








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CBL/SAT		0
	Media Player		Guide / EPG / -/--
	Blu-ray/DVD		2
	Game		Fav / Marker / PC
	AUX		7
	Tuner		6
	Phono		5
	TV Audio		1
	CD		3
	USB		8
	Bluetooth		9
	Internet Radio		4
	Heos		Smart / List
	CH+		CH+ / Page+
	Volume+		Vol+
	CH-		CH- / Page-

**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	I<</Tune-		I<< / Preset-
	I<</Tune-		<< / Tune-
	Play/Pause		Play / Slow
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		>> / Tune+
	Band		Display / Media
	Stop/Mode		Stop / Hold
	Memory		Eject / Surround
	Smart Select 1		Red / Netflix / Search





Originalfernbedienung

Ersatzfernbedienung

SMART 2	Smart Select 2	APP REPEAT	Green / APP / Repeat
SELECT 3	Smart Select 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Smart Select 4	Prime Video RANDOM	Blue / Prime Video / Random
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer

Originalfernbedienung

Ersatzfernbedienung