 

 






 



 






 









 

 






 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	S.Mode /		D.Menu / Top
	S.Mode /		Shift + D.Menu / Top Menu
	P.Mode / Title		Sound / Title
	FAV + / Go To		Shift + CH + /
	FAV - / Angle		Shift + CH - /
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Shift + Play /
	>>		>> / Tune+
	Reveal		Smart / List
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Red / Program		Shift + Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Red / Program		Red / Netflix / Search
	Green / Intro		Green / APP / Repeat
	Yellow / Repeat		Shift + Yellow / YouTube / Repeat
	Yellow / Repeat		Yellow / YouTube / Repeat
	Blue / A-B		Blue / Prime Video / Random
	Index / D.Disp.		Display / Media
	Sub-T		Subtitle / EQ
	Audio / Lang		Audio / Lang I/II
	Size / Zoom		Zoom / Size
	Info		Info / Angle
	TV / Radio		TV/Radio /
	FAV		Fav / Marker / PC
	Sleep		Sleep / Timer
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	P +		CH+ / Page+
	Up		Up
	Vol +		Vol+
	Left		Left
	OK		OK
	Right		Right
	P -		CH- / Page-
	Down		Down
	Vol -		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Text / Setup		Text / Goto
	Text / Setup		Shift + Text /
	0		0
	Recall / Eject		Shift + Back / Return
	Recall / Eject		Back / Return

