



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--		Shift + Guide / EPG / --
	0		0
	Back		Back / Return
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Format		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Fav		Fav / Marker / PC
	Vol+		Vol+
	Page+		Shift + CH+ /
	CH+		CH+ / Page+
	Vol-		Vol-
	Page-		Shift + CH- /
	CH-		CH- / Page-
	Lang		Audio / Lang I/II
	TV/Rad		TV/Radio /
	Info		Info / Angle
	EPG		Guide / EPG / --
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / SOS		Blue / Prime Video / Random
	Timer		Sleep / Timer
	Eject		Eject / Surround
	List		Smart / List
	II>		Shift + Pause / Step / Step /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

**Originalfernbedienung Ersatzfernbedienung**


