
 






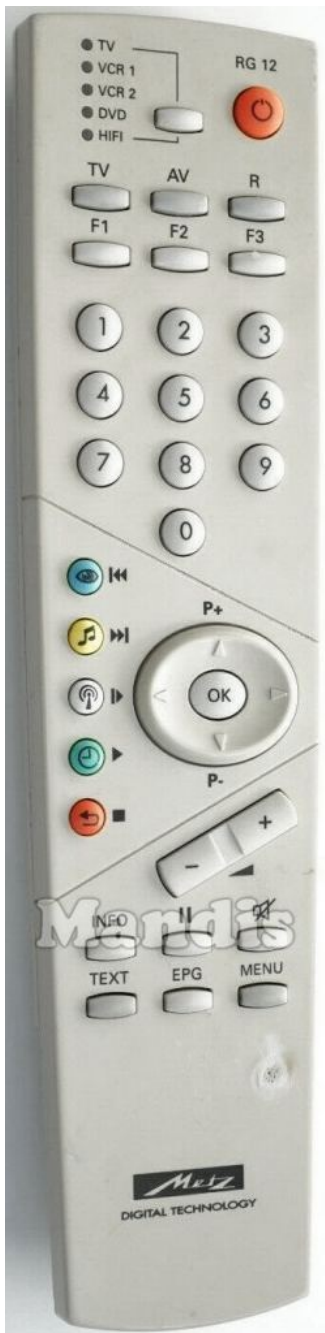

**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	AV		AV
	R		Dual
	F1		Shift + 1
	F2		Shift + 2
	F3		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	Blue		Blue
	I<<		I<<
	Yellow		Yellow
	>>I		>>I
	White/I>		Smart
	Green		Green
	Play		Play
	Red		Red
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	Up		Up
	Down		Down
	P-		Ch -
	Right		Right
	Left		Left





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	OK		Ok				
	Info		Info				
	Pause		Pause				
	Text		Text				
	Mute		Mute				
	Menu		Menu				
	EPG		Guide				

