












 

 

 




















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Info |  | Info / Angle |
|  | 0 |  | 0 |
|  | Source |  | AV / Input / RDS |
|  | Home |  | D.Menu / Top |
|  | Up |  | Up |
|  | Menu |  | Menu / Home |















 

 

 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|----------------------------|
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Netflix |  | Shift + Red / Netflix / |
|  | Prime Video |  | Shift + Blue / Prime |
|  | YouTube |  | Shift + Yellow / YouTube / |
|  | Google Play |  | Shift + Green / APP / |
|  | Vol+ |  | Vol+ |
|  | Text / CC |  | Text / Goto |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Smart / List |  | Smart / List |
|  | P- |  | CH- / Page- |
|  | Guide |  | Guide / EPG / -/- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | Subtitle |  | Subtitle / EQ |
|  | Pause |  | Pause / Step / Freeze |
|  | AD |  | Audio / Lang I/II |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

