



Originalfernbedienung Ersatzfernbedienung

	POWER ON		Power
	STANDBY	+	Shift + Power
	HDMI 1	4	4
	HDMI 2	5	5
	COMPUTER / PC		Fav / Marker / PC
	COMPONENT /	6	6
	AV MEMORY 1	1	1
	AV MEMORY 2	2	2
	AV MEMORY 3	3	3
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	DOWN		Down
	MENU		Menu / Home
	IRIS		>> / Tune+
	ASPECT		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	CONTRAST /		Rec / Rec Mode
	BRIGHTNESS		Play / Slow
	COLOR TEMP. /		Stop / Hold
	GAMMA		<< / Tune-
	SHARPNESS /		Pause / Step / Freeze
	COLOR		I<< / Preset-
	AUTO POSITION / A.P.		Smart / List





Originalfernbedienung Ersatzfernbedienung

	POWER ON		Power
	STANDBY	+	Shift + Power
	HDMI 1		4
	HDMI 2		5
	COMPUTER / PC		Fav / Marker / PC
	COMPONENT /		6
	AV MEMORY 1		1
	AV MEMORY 2		2
	AV MEMORY 3		3
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	DOWN		Down
	MENU		Menu / Home
	IRIS		>> / Tune+
	ASPECT		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	CONTRAST /		Rec / Rec Mode
	BRIGHTNESS		Play / Slow
	COLOR TEMP. /		Stop / Hold
	GAMMA		<< / Tune-
	SHARPNESS /		Pause / Step / Freeze
	COLOR		I<< / Preset-
	AUTO POSITION / A.P.		Smart / List

