



**Originalfernbedienung    Ersatzfernbedienung**

	Open/Close		Eject / Surround
	V-Mode		Picture / Format
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/--
	Search		Red / Netflix / Search
	OSD		Fav / Marker / PC
	Up		Up

**Originalfernbedienung    Ersatzfernbedienung**

	EQU		Smart / List
	Left		Left
	Setup		Setup / OPT /
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Intro		OK
	<</F.REV		<< / Tune-
	>>/F.FWD		>> / Tune+
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Enter/Play		Play / Slow
	Stop		Stop / Hold
	I< Slow		CH- / Page-
	Slow >I		CH+ / Page+
	Volume-		Vol-





Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Prog		TV/Radio /
	Subtitle		Subtitle / EQ
	Title/PBC		Sound / Title
	Menu		Menu / Home
	Zoom		Zoom / Size
	PAL/NTSC		D.Menu / Top
	Repeat		Green / APP / Repeat
	A-B RPT		Yellow / YouTube / Repeat
	Mute		Mute / Dimmer
	DSP		Display / Media
	Angle		Info / Angle
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung


