





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Back / Return
	V +		Vol+
	Aspect		Shift + Picture / Format
	CH +		CH+ / Page+






Originalfernbedienung Ersatzfernbedienung

	V -		Vol-
	Home		Shift + Menu /
	CH -		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Display		Display / Media
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	MTS		Shift + Smart / List
	Rec		Rec / Rec Mode



 

 











Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Index		<< / Tune-
	<< / Index		Shift + << /
	Play/Pause /		Shift + Play /
	Play/Pause /		Pause / Step / Freeze
	Play/Pause /		Play / Slow
	>> / TTX		>> / Tune+
	>> / TTX		Shift + >> /
	I<< / Sub.Pg		Shift + I<< / Preset-
	I<< / Sub.Pg		I<< / Preset-
	>>I / Reveal		>>I / Preset+
	Stop / Mix		Shift + Rec / Rec Mode
	Stop / Mix		Shift + Stop /

Hold

Originalfernbedienung Ersatzfernbedienung

	CAP		Shift + Display / Media
	Subtitle		Subtitle / EQ
	TV / Radio		TV/Radio /
	FAV		Fav / Marker / PC
	Size / Mouse		Zoom / Size
	Hold / Refresh		Stop / Hold

