 

 

 



 

 

 

 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	V.Surround		Shift + Eject / Surround
	Repeat		Green / APP / Repeat
	Open / Close		Eject / Surround
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	On/Off		Text / Goto
	Digest		Smart / List
	Set Up		Setup / OPT /
	Zoom		Zoom / Size
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Down		Down
	Return		Back / Return
	<< / Multi Speed-		<< / Tune-
	Play		Play / Slow
	>> / Multi		>> / Tune+
	I<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>I		>>I / Preset+
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6





Originalfernbedienung   Ersatzfernbedienung

	0		0
	7		7
	8		8
	9		9
	Enter		Fav / Marker / PC

Originalfernbedienung   Ersatzfernbedienung




Mandis  
DVD-15  
Remote Control Unit  
Nakamichi

Mandis

Mandis SHOP  
www.mandis.tv