




 
 
 
 
 

 

 
 
 

 






 
 

 


 


 





 
 
 
 
 

 

 
 
 

 






 
 

 


 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Play	
Reveal		Pause	
Txt Stop		Stop	
Info		Rec	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



 
 

 
 
 







 
 
 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Audio+	 + 	Shift + Pause	
Tone-		<<	
Tone+		>>	
On/Tim	 + 	Shift + Subt	
Game Coo	 + 	Shift + Eject	
Disp	 + 	Shift + Info	
Browse	 + 	Shift + Back	
3.*	 + 	Shift + Guide	
Surround	 + 	Shift + Red	
Nicam/Mono	 + 	Shift + Green	
Level L	 + 	Shift + Yellow	
Level R/Woofer	 + 	Shift + Blue	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Play	
Reveal		Pause	
Txt Stop		Stop	
Info		Rec	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	





Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text	 + 	Shift + Mute
Audio+	 + 	Shift + Pause
Tone-		<<
Tone+		>>
On/Tim		Smart
Off/Tim		Media
Mix Scan	 + 	Shift + TV/R
Store Text	 + 	Shift + Text

Originalfernbedienung Ersatzfernbedienung

Color+ P.Std	 + 	Shift + Format
Game Coo	 + 	Shift + Eject
Bright+ Mode	 + 	Shift + Menu
Search	 + 	Shift + Up
Disp	 + 	Shift + Info
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Store	 + 	Shift + Down
Browse	 + 	Shift + Back
Contrast+		>>
Color- S.Std	 + 	Shift + Dual
Contrast-		<<
3.*	 + 	Shift + Guide
4.# 16:9		Format
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Level R/Woofer	 +  Shift + Blue		

