














 
 
 





 



 




 








 


 
 
 
 
 
 
 

 
 
 

 
 
 

 


 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Setup/EPG		Options
	DVD/AV/DTV		Media
	DVD/USB/CARD		AV
	OSD/Info		Info
	↔/Search		Back
	Audio		Dual
	Subtitle		Subt
	Menu		Menu
	Exit/Title		Exit
	FAV/Zoom		Pre Ch
	CH+		Ch +
	CH-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	OK		Ok

 







 

Originalfernbedienung Ersatzfernbedienung

	DVD VOL+		Right
	DVD VOL-		Left
	Repeat/TV-R		TV/R
	Program/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide
	Stop		Stop
	Play		Play





Originalfernbedienung Ersatzfernbedienung

PLAY/PAUSE 	Pause		Pause
PREV 	Prev/Red		Red
NEXT 	Next/Green		Green
REV 	Rev/Yellow		Yellow
FWD 	Fwd/Blue		Blue

Originalfernbedienung Ersatzfernbedienung

