









 



 





 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	<<		I<< / Preset-
	>>		>>I / Preset+
	:Q		Sound / Title
	TV Play		Eject / Surround
	Format		Picture / Format
	Live TV		TV/Radio /
	≡		D.Menu / Top
	⚙		Setup / OPT /
	Green / TTX		Text / Goto







 

 

 



 






 








 
 
Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Del		Exit / Cancel / Clear
	Blue / Info		Info / Angle
	Back		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	Internet		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Mouse		Display / Media
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red / EPG		Guide / EPG / -/--
	←]		Fav / Marker / PC
	Red / EPG		Red / Netflix / Search
	Green / TTX		Green / APP / Repeat
	Yellow / FAV		Yellow / YouTube / Repeat
	Blue / Info		Blue / Prime Video / Random
	Yellow / FAV		Shift + Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

