













 


 

 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	Home		Shift + Home / Menu /
	Rec		Rec / Rec Mode
	Setup		Setup / OPT /
	Sub-T		Subtitle / EQ
	Mouse		Smart / List
	T-Shift		Zoom / Size
	Tv/Radio		TV/Radio /
	Text		Text / Goto
	Play/Index		Play / Slow
	Pause/Mix		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Stop/Reveal		Stop / Hold
	<</Hold		<< / Tune-
	>>/Subpage		>> / Tune+
	I<</Size		I<< / Preset-
	>>I/Cancel		>>I / Preset+
	Info		Info / Angle
	Input		AV / Input / RDS
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Audio		Audio / Lang I/II



