







































Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 / □ |  | 0 |
|  | 0 / □ |  | Display / Media |
|  | Exit / TV/Radio |  | TV/Radio / |
|  | Exit / TV/Radio |  | Exit / Cancel / Clear |
|  | Mute |  | Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |













Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-------------------|
|  | i |  | Info / Angle |
|  | Back |  | Back / Return |
|  | ● |  | Rec / Rec Mode |
|  | Menu |  | Menu / Home |
|  | Guide |  | Guide / EPG / -/- |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |
|  | ↑ |  | Shift + CH+ / |
|  | ↑ |  | >> / Preset+ |
|  | ↓ |  | Shift + CH- / |
|  | ↓ |  | << / Preset- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Green / Option |  | Setup / OPT / |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Red |  | Red / Netflix / Search |
|  | Yellow / Text |  | Yellow / YouTube / Repeat |
|  | Green / Option |  | Green / APP / Repeat |
|  | Blue / Recall |  | Fav / Marker / PC |
|  | Yellow / Text |  | Text / Goto |
|  | Blue / Recall |  | Blue / Prime Video / Random |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

