


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info / Angle
	Mute		Mute / Dimmer
	ideal		Smart / List
	Back		Back / Return
	TV		TV/Radio /
	TV		Shift + 1

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Red/M		Red / Netflix / Search
	Green/Sound		Sound / Title
	Green/Sound		Green / APP / Repeat
	Yellow/Vision		Yellow / YouTube / Repeat
	Blue/Menu		Blue / Prime Video / Random
	Blue/Menu		Menu / Home
	Text		Text / Goto
	Size		Zoom / Size
	Stop		Stop / Hold




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info / Angle
	Mute		Mute / Dimmer
	ideal		Smart / List
	Back		Back / Return
	TV		TV/Radio /
	TV		Shift + 1

**Originalfernbedienung Ersatzfernbedienung**










 
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Red/M		Red / Netflix / Search
	Green/Sound		Audio / Lang I/II
	Green/Sound		Green / APP / Repeat
	Yellow/Vision		Yellow / YouTube / Repeat
	Blue/Menu		Blue / Prime Video / Random
	Blue/Menu		Menu / Home
	Text		Text / Goto
	Size		Zoom / Size
	Stop		Stop / Hold




**Originalfernbedienung   Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info / Angle
	Mute		Mute / Dimmer
	ideal		Smart / List
	Back		Back / Return
	TV		TV/Radio /
	TV		Shift + 1

**Originalfernbedienung   Ersatzfernbedienung**

	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Red/M		Red / Netflix / Search
	Green/Sound		Green / APP / Repeat
	Green/Sound		Sound / Title
	Yellow/Vision		Yellow / YouTube / Repeat
	Blue/Menu		Blue / Prime Video / Random
	Blue/Menu		Menu / Home
	Text		Text / Goto
	Size		Zoom / Size
	Stop		Stop / Hold

