







 











 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Subpage		Media
	Pre-CH		Pre Ch
	PC		Smart
	Tv/Video		TV/R
	Sleep		Sleep
	Sound		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Mix		AV
	Teletext		Text
	Text Size		Format
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Blue		Blue
	Index		List
	Subtitle		Subt
	Hold		D. Menu
	Reveal		Options
	PIP/POP		3D
	PIP Swap		Back
	PIP Size		Eject

