 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i / Display		Display / Media
	0		0
	Recall / Mouse		Back / Return
	TV / Radio		TV/Radio /
	Audio		Audio / Lang I/II
	SUB-T		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	www / Browser		Smart / List
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	Home		Shift + Menu /
	CH +		CH+ / Page+
	Setup		Setup / OPT /
	CH -		CH- / Page-
	Vol -		Vol-
	Refresh		Info / Angle
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Screenshot		D.Menu / Top
	Stop		Stop / Hold
	Play/Pause / Size		Play / Slow
	Play/Pause / Size		Pause / Step / Freeze
	Play/Pause / Size		Zoom / Size
	TXT / Mix		Text / Goto
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	>> / Hold		Shift + Stop /
	l<< / Reveal		l<< / Preset-
	>>l / Cancel		>>l / Preset+

Originalfernbedienung Ersatzfernbedienung

