
 



 
 
 
 

 
 

 




 
 


 





Originalfernbedienung Ersatzfernbedienung








 

 
 
 

 
 

 
 
 
 

 

 

 

 

 

 


	Power		Power
	Mute		Mute
	Source		AV
	Radio		TV/R
	Still		Smart
	List		List
	Aspect		3D
	EPG		Guide
	O)/I/II/Audio		Dual
	FAV+		Shift + Up
	FAV-/Repeat		Shift + Down
	Info		Info
	Sleep		Sleep
	PIC		Format
	Sound		Shift + Dual
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung


 


	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Recall		Pre Ch
	Text		Text
	<<		<<
	>>/Mix		>>
	Play		Play
	Pause/Index		Pause
	I<</Hold		I<<
	>>I/Size		>>I




Originalfernbedienung Ersatzfernbedienung

	Stop/Cancel		Stop
	Rec/Reveal		Rec
	[≡o]/Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue

