



 


 


 
 









 

 
 

 
 
 
 

 

 



 


 

 




 













 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡i]/Info		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	OOI/II/Audio		Dual
	Menu		Menu
	[≡♦]/[++]		3D

Originalfernbedienung Ersatzfernbedienung

	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	List		List
	Sleep		Sleep
	EPG		Guide
	♥/FAV		Pre Ch
	Red		Red
	Green		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	[≡]		Text				
	Time Shift		Media				
	[≡o]		Format				
	Radio		TV/R				
	[≡x]		Subt				
	DMP		Options				
	Index		Smart				
	Rec		Rec				

