



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	Radio / Angle		TV/R
	List/USB		List
	EPG/+10		Guide
	Still		Pause
	Aspect		Format
	OO/I/II Audio		Dual
	FAV+/Prog		Smart
	FAV-/Repeat		Media
	Info		Info
	Sleep		Sleep
	PIC		Shift + Format
	Sound		Shift + Dual
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	CH-		Ch -
	CH+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Recall		Back
	Text/Left		Text
	Text/Left		Left
	Mix/Right		Shift + Text
	Mix/Right		Right
	[Sub]/Title		Subt
	Index / Play		Play
	Hold/Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Size/>>	 >>	 Green/Title	 Green
 Cancel/Stop	 Stop	 Yellow/Setup	 Yellow
 Reveal/Open/Close/Rec	 Rec	 Yellow/Setup	 Options
 Reveal/Open/Close/Rec	 Eject	 Blue/D.Menu	 Blue
 1	 1	 Blue/D.Menu	 D. Menu
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Page-	 Shift + Ch -		
 Page+	 Shift + Ch +		
 Red/Goto	 Red		

