



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Radio		TV/R
	Time Shift		3D
	Sleep		Sleep
	Rec		Rec
	Fav		Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Mouse		Shift + Media
	www		Media
	Back		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Smart TV		Smart
	Home		Shift + Smart
	Refresh		D. Menu
	CH+		Ch +
	CH-		Ch -
	Red / <<		Red
	Red / <<		<<




Originalfernbedienung Ersatzfernbedienung

	Green / >>		Green
	Green / >>		>>
	Yellow / I<<		Yellow
	Yellow / I<<		I<<
	Blue / >>I		Blue
	Blue / >>I		>>I
	Text / Play/Pause		Text
	Text / Play/Pause		Play
	Text / Play/Pause		Pause
	Text / Play/Pause		Stop
	Reveal		Shift + Text
	Size		Eject
	PVR List / Index		Shift + List
	Subtitle		Subt
	S.Mode		Dual
	List		List
	P.Mode		Format

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	≡		Options
	Menu		Menu
	Pre-CH		Pre Ch
	Audio		Shift + Dual
	EPG		Guide
	Source		AV
	Exit		Exit

