 
























 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	TV		TV/Radio /
	I/II		Audio / Lang I/II
	OO		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





 



 

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	P>P		Fav / Marker / PC
	PP		Back / Return
	[+]		Info / Angle
	Mute		Mute / Dimmer
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	TXT		Text / Goto
	Time		Shift + Sleep / Timer
	[=i]		Subtitle / EQ
	[=+]		Picture / Format
	[=x]		Setup / OPT /
	[/ =]		Display / Media





Originalfernbedienung Ersatzfernbedienung

	[=?]		Guide / EPG / -/--
	[=◇]		Menu / Home
	[=▲]		CH+ / Page+
	[=▼]		CH- / Page-
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

